

NEC SV8000 SERIES

System Administration

To Change Display Names:

Press **SPK** key

Dial 700

Enter extension number

Dial name using keypad or following chart:

Press **HOLD**

Use this keypad digit...	When you want to
1	Enter characters: 1 @ [¥] ^ ' { } > <
2	Enter characters: A-C, a-c, 2
3	Enter characters: D-F, d-f, 3
4	Enter characters: G-I, g-i, 4
5	Enter characters: J-L, j-l, 5
6	Enter characters: M-O, m-o, 6
7	Enter characters: P-S, p-s, 7
8	Enter characters: T-V, t-v, 8
9	Enter characters: W-Z, w-z, 9
0	Enter characters: 0 ! " # \$ % & ()
*	Enter characters: * + , - . / : ; < = > ?
#	Used to move the cursor one space to the right, ## = space
CONF	Delete all characters to the right of the cursor (Name Only)
EXIT	Delete all characters to the right of the cursor (Name and Number)

System Speed Dialing Storage:

Press ↓

Press Prog

Press ↓

Press SPD (Speed Dialing)

Set Sys - Dial in Bin number 0000-0500

Dial in telephone number you wished to be stored

Press **HOLD**

Enter name associated with phone number

Press **HOLD**

You will hear confirmation tone

Continue entering in speed dials or press SPK to hang up